



# VIDEOTREE

LUXURY WATERPROOF TELEVISIONS MADE IN ENGLAND

ON-WALL RANGE: 27" / 32" / 42" / 46" / 55"

## QUICK INSTALL & SETUP GUIDE

### LIFESTYLE RANGE



Quick installation guide for Videotree's on-wall range of waterproof televisions.


This guide is provided as an overview of the installation procedure. Please refer to your user manual for full installation instructions.



**WARNING:** If you are unsure about the installation of your television STOP IMMEDIATELY and contact a professional. Incorrect installation could result in bodily injury or damage to the television.

This guide is provided as a simple overview of the installation process. Please refer to the full User Manual for complete installation and setup instructions. If you are unsure about the installation of your television STOP IMMEDIATELY and contact a professional. Incorrect installation could result in bodily injury or damage to the television.

Use the dimensions below and diagrams opposite to understand the size of your television and backbox.

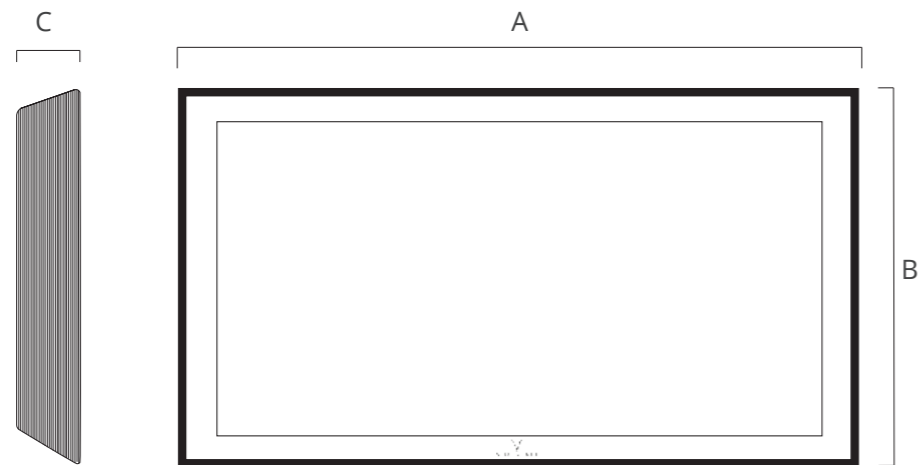


TELEVISION SIZE					
KEY*	27"	32"	42"	46"	55"
A	639	747	986	1073	1266
B	389	452	589	637	747
C	35	43	43	43	43
PACKAGING DIMENSIONS					
Length	735	820	1200	1250	1500
Depth	180	100	100	100	200
Height	550	520	650	700	1200
Weight (kg)	16kg	22kg	29kg	35kg	40kg
VESA MOUNT DIMENSIONS					
Fixing Holes	100 X 100	200 X 200	400 X 400	400 X 400	400 X 400

\*Measurements are in millimetres (mm) unless otherwise stated.

**WARNING:** When removing your television from the packaging, ensure that you are able to lift the television safely. We recommend that 2 persons are present to lift and move the larger televisions.


When lifting your television, face the screen away from your body and hold the top and the bottom of the frame securely. Do NOT hold the screen or place excessive pressure on the screen.

**NOTE:** Before installing your television, we recommend that you connect the television to a power source and ensure that it is working correctly.

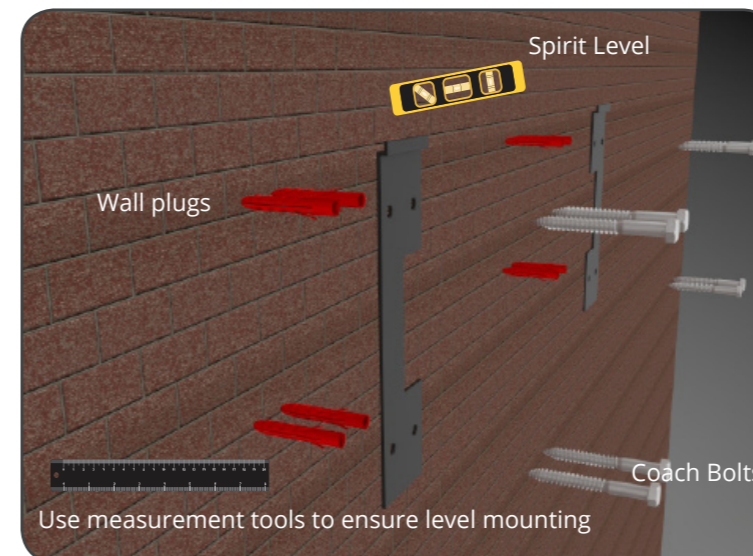

**STEP 1**


Once you have determined the best position for your on-wall television, mark out and fix the wall mount brackets to the wall using coach bolts and wall plugs if required. Ensure that you correctly measure the fixtures and fittings to align with your television, ensuring that they are positioned as straight and level as possible.

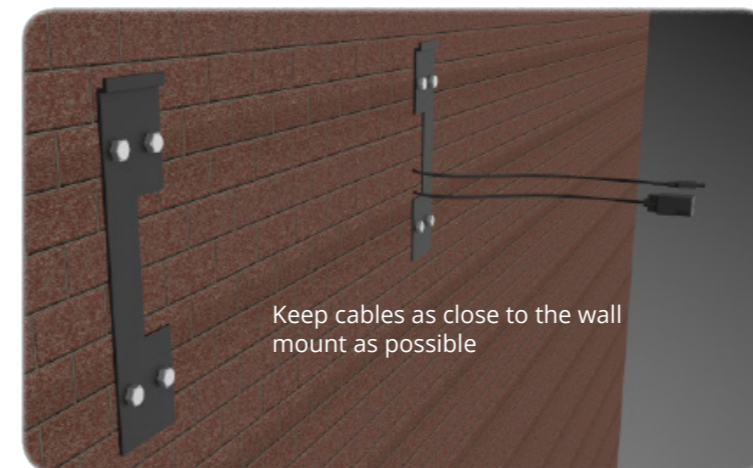

**STEP 2**

Once you have fixed your wall mount brackets, install the wiring required to operate your television - power supply, HDMI cable, aerial cable etc.

We recommend fixing your wiring into the wall and keeping the cables as tight to the wall as possible.

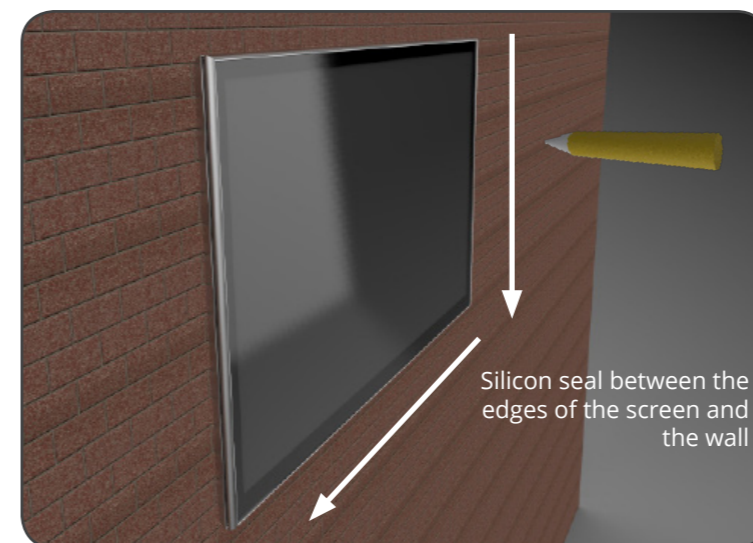

**STEP 3**

We recommend that you test your television once the wires have been fixed into the wall (this may require two persons).

Connect the wires to the television and place the television onto the brackets. Test that your television is working correctly and that the cables are correctly inserted into the back of the television before applying sealant.

Once you have ensured your television is working correctly and that all the cables have been connected, use a silicon sealant to seal between the edges of your television and the wall. Ensure that any gaps are completely sealed to prevent ingress of water and dust to the rear of the television. Your television is ready for use!

**WARNING:** Ensure the cables are long enough to reach your television and any power outlets or external devices.


Ensure the mains supply socket is switched off before connecting your television power supply.

We recommend using at least two persons to lift the television.

The rear of the television is NOT water resistant. Do NOT expose the rear of the television to water. If you do not correctly seal any gaps between the television and the wall, your television could become exposed to moisture or dust and your warranty will be voided.

If this is the first time you are turning on the TV and there are no programs in the TV memory, the "Auto Installation" menu will appear on the screen. Using the MASTER remote control, follow the 5 setup steps as below:

**Setup 1: Set up Home**

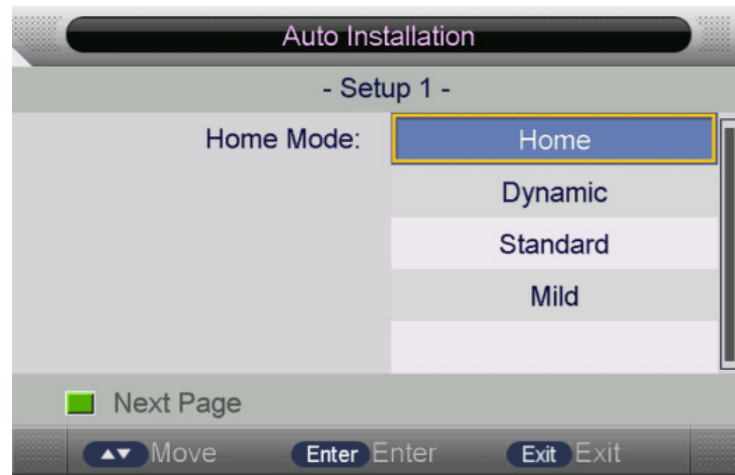

**Setup 2: Select the Country**




**Setup 6.1: Set up the Satellite**



**Options In Menu:**

OPTION	VALUE
Load Default Database / Database Import	Import default Satellite database
Satellite System	Enter "Satellite System" menu for settings


**Setup 7: Channel List Menu**

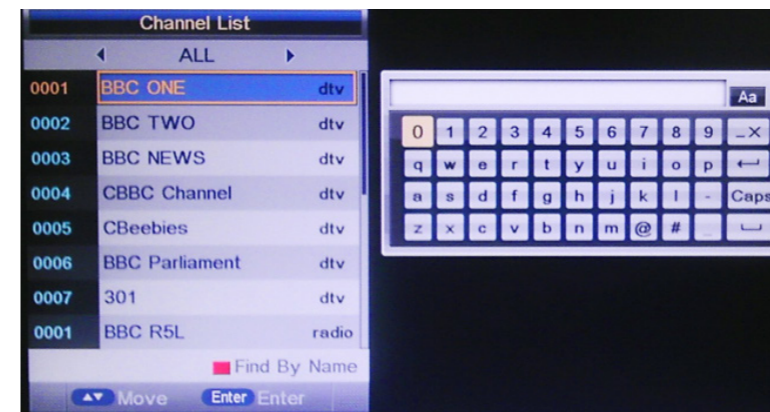


**Key Stroke In Menu:**

KEY STROKE	ACTION
KEY_UP	Focus on the previous item/program
KEY_DOWN	Focus on the next item/program
KEY_MENU	Exit Menu
KEY_CHANNEL_LIST	Exit Menu
KEY_RED	Show "Find" Mode Menu


**Setup 3: Select the Language**

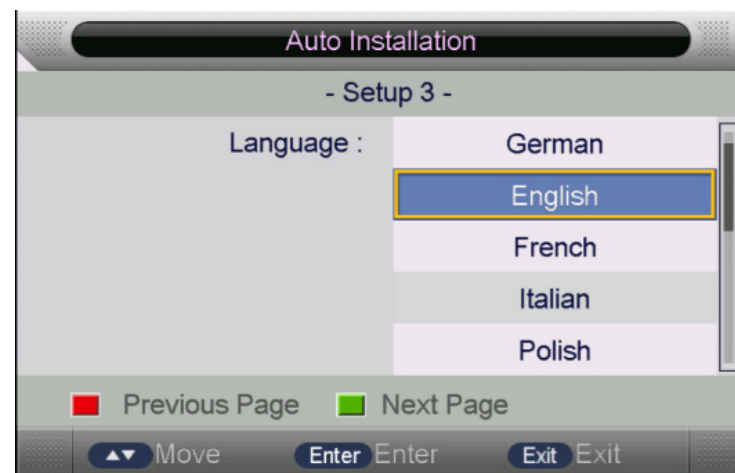

**Setup 4: Select "Auto-Power Off"**

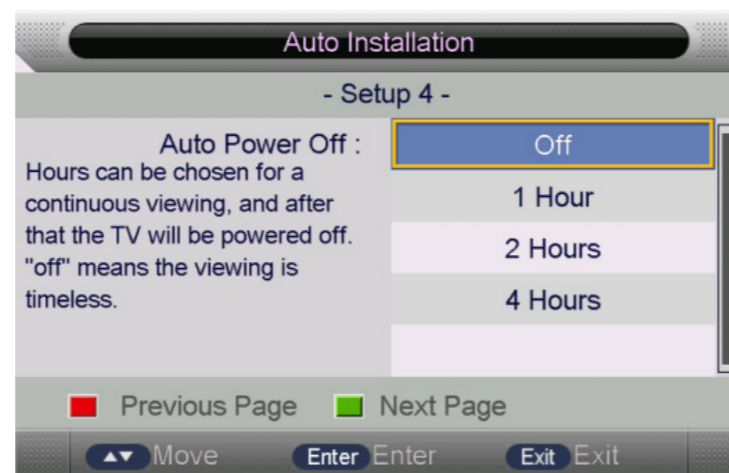

**Setup 8: Favourite Menu**

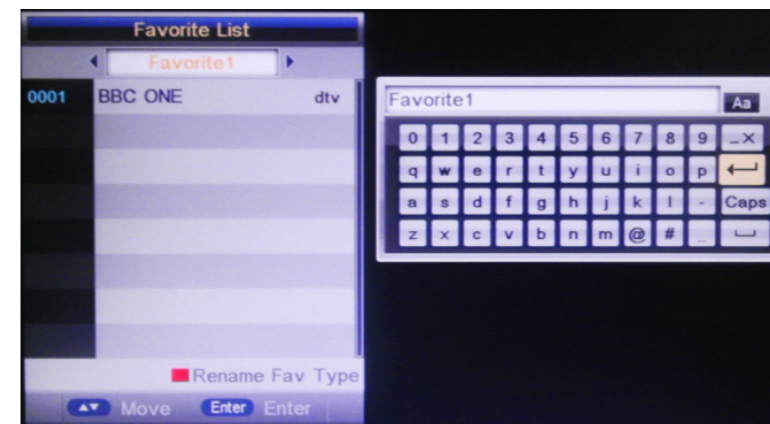

**Key Stroke In Menu:**

KEY STROKE	ACTION
KEY_UP	Focus on the previous item/program
KEY_DOWN	Focus on the next item/program
KEY_MENU	Exit Menu
KEY_FAV_LIST	Exit Menu
KEY_RED	Show "Rename Favourite List Name" Menu

**Setup 5: Select the TV Connection**



**Setup 6: Select the "Auto-Search" (air/cable type)**



The 'Speaker Out' port can be found on the left of the control panel on the rear of the television.

Two external speakers (left and right) can be connected to this port using standard red and black speaker cables (not provided).

**Cable Connections:**

**Red** = Positive +ve

**Black /Red & Black** = Negative -ve


**NOTE:**  
External speakers and speaker cables are NOT supplied with your television.



**STEP 2**

CONNECT SOCKET TO THE TV

Plug the green socket (with wires now attached) back into the main control panel. This should simply 'snap' back into place.

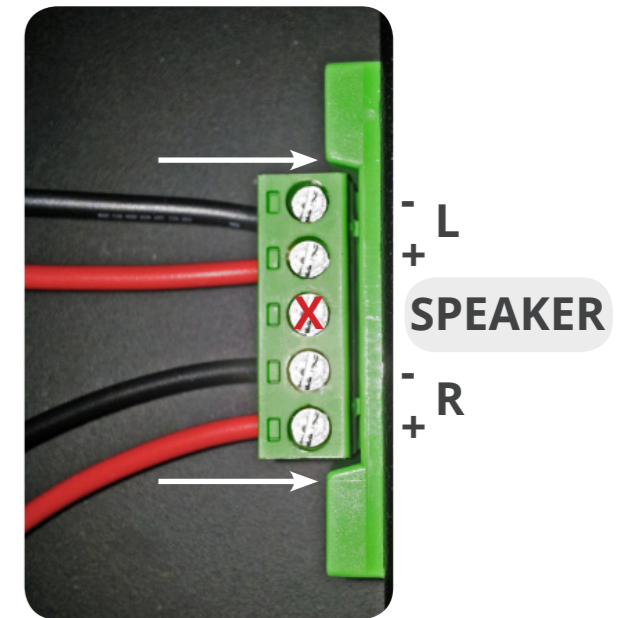

**STEP 1**



CONNECT TO THE TV SOCKET

Unplug the green speaker socket from the main control panel.

Unscrew the required connection sockets on the back of the television and place the cable connections into the correct sockets as shown in the image.

Do NOT use the central socket.

Screw the screws back into position so that they firmly hold the cable connections. Do not place excessive force onto the screws.

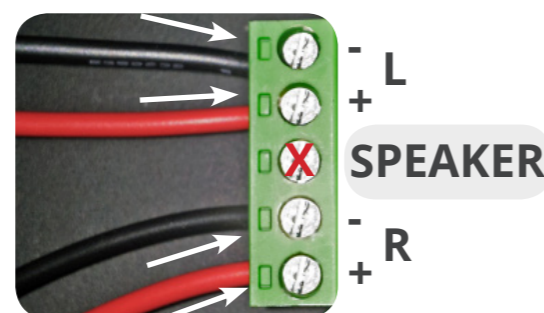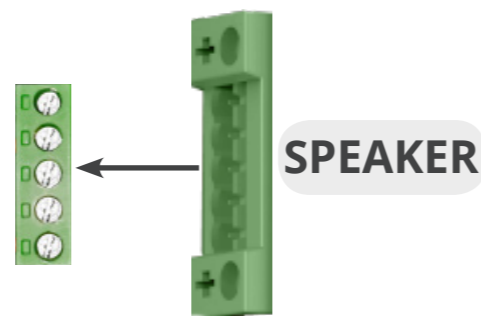



**STEP 3**

CONNECTION TO SPEAKER


Connect the speaker cables to the external speakers by connecting them to the socket.

The image shown is the connection to Videotree's External Ceiling Speakers. Lift or press the plastic levers to open or close the sockets to insert the cable connections from the television.

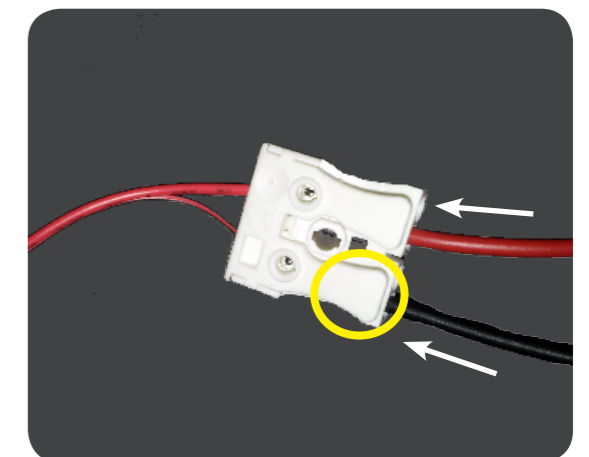

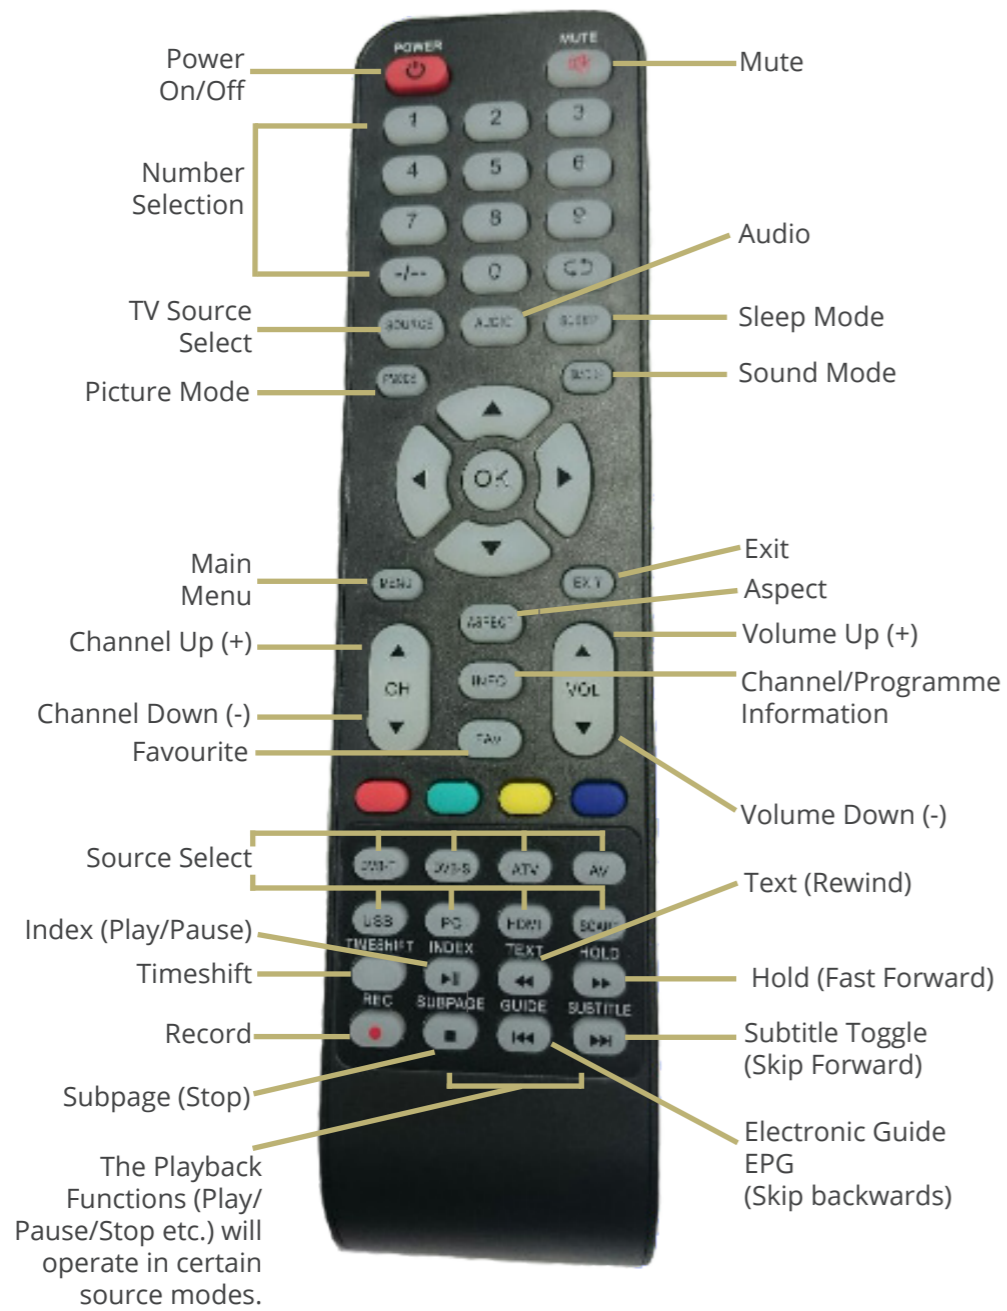

PLEASE NOTE: The Master Remote Control is NOT waterproof. Do NOT get wet or submerge under water.

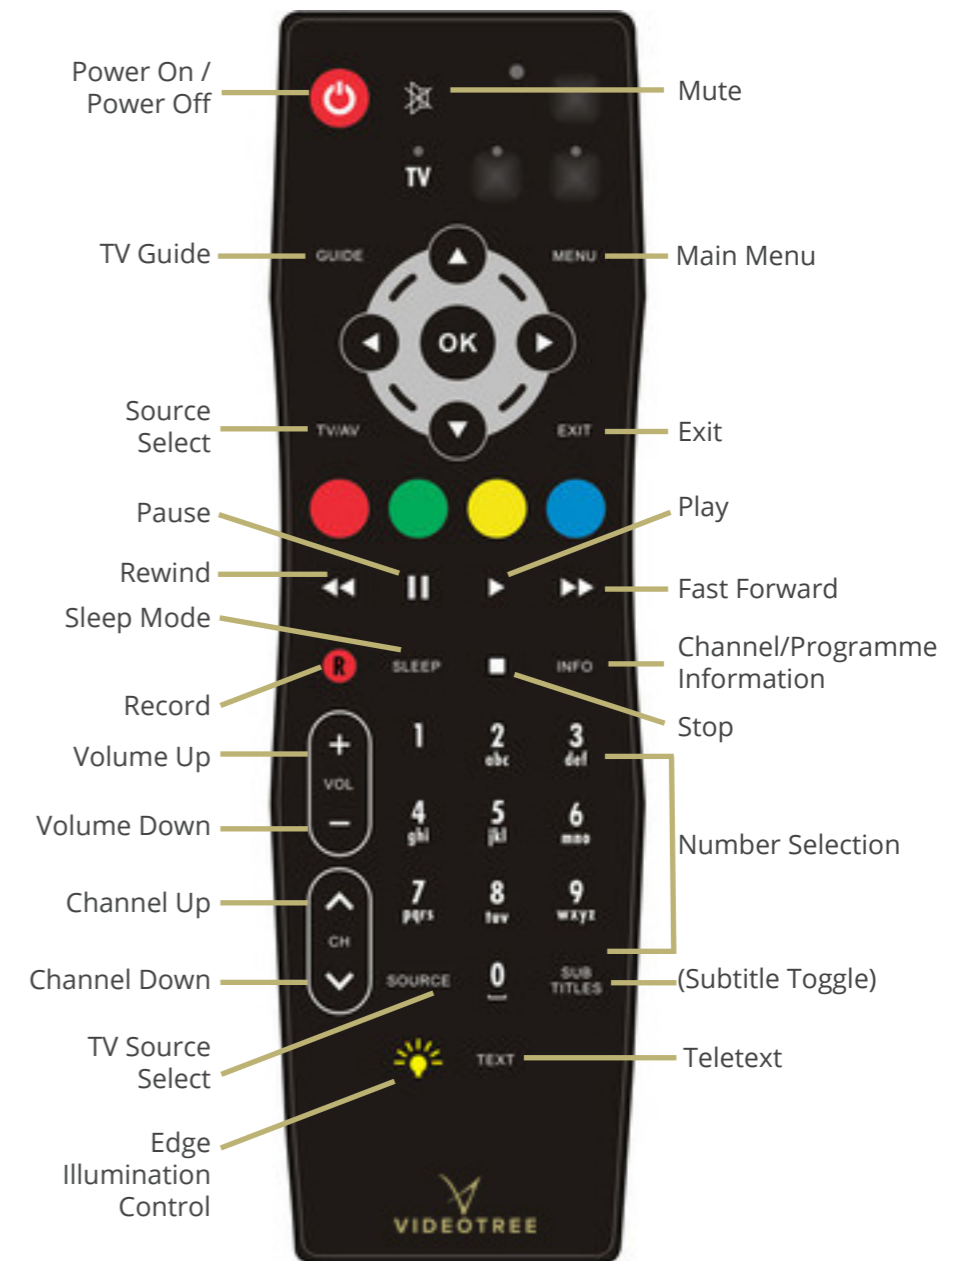

PLEASE NOTE: The Learning Remote Control is NOT waterproof. Do NOT get wet or submerge under water.

**Power ON/OFF & Standby Function:**

Press the RED "POWER" button to turn the TV ON & OFF. When your TV is ON press the "POWER" button to enter standby mode. When your TV is in Standby Mode, press the "POWER" button to start it.

**Channel Switching:**

In the TV or DTV (Air) Source, you can switch the channel by pressing either "CH▲" or "CH▼" button.

**Volume Adjust:**

Adjust the volume by pressing either "VOL▲" or "VOL▼" buttons. A volume adjusting level will appear on the screen displaying the current volume.

**Mute Function:**

To mute the sound, simply press the "MUTE" button. To unmute the sound, press the "MUTE" button once more.

**To Access the Electronic Programme Guide (EPG):**

Press the "GUIDE" button and the EPG will appear on the screen. Use the "▲" and "▼" buttons to navigate through the channels and the "◀" and "▶" buttons to view the different programmes for each channel. Press the central "OK" button to select a current programme or to set a reminder for a future programme. To exit the EPG, simply press the "GUIDE" button once more.

**Sleep Function:**

When your TV is ON, press the "SLEEP" button to start the "Sleep" function which will automatically turn the TV OFF after a certain period of time. Continue to press the "SLEEP" button to select a certain time period or turn the function OFF.

**Switching the Input Source:**

After the normal start-up process, press the "Source" button, then either "Up" or "Down" button to choose the preferred source, then press either the "OK" or "▶" button to finish.

**Info Function:**

To find the current Source press the "Info" button to view the Source and additional information such as: Channel Number / Colour System / Sound System (in the TV source) / Current Frequency / Bandwidth / Event Information / etc. (in the DTV (Air) Source).

**Set up Picture Mode:** Select MENU then choose Picture

Pressing the "PMODE" button will change the parameters of the displayed picture such as:

Luminance / Contrast / Sharpness / Hue / Colour etc.

This function can also be found in the Main Menu.

**Set up Sound Mode:** Select MENU then choose Sound

Pressing the "SMODE" button will change the parameters of the sound such as:

Balance / Maximum Volume / Minimum Volume etc.

This function can also be found in the Main Menu

If you have any questions regarding the installation or set-up of your on-wall television, please contact Videotree via the details opposite.

The contents of this guide are subject to changes at anytime.  
Please refer to your instruction manual or contact Videotree for more information.



Unit 1 Ember Centre  
Hersham Trading Estate  
Lyon Road  
Walton-On-Thames  
Surrey, KT12 3PU  
United Kingdom

Tel: 01932 267 797 (Mon-Fri, 9am-5pm)

Overseas: +44 (0)1932 267 797

Fax: 01932 251 206

Email: sales@videotree.com

Web: www.videotree.com